


INSTALLATION INSTRUCTIONS MOULDED CASE CIRCUIT BREAKERS TEMBREAK PRO P400 3P BASIC ELECTRONIC

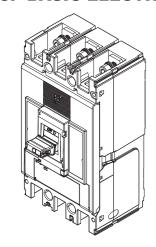



AUS 1300 NHP NHP

NZ 0800 NHP NHP


nhp.com.au



Extension Bars

Terminal


Covers

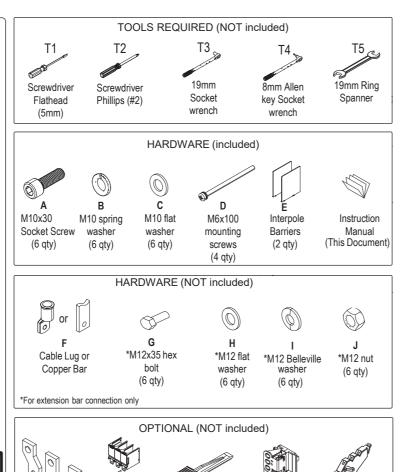



Terminal Cover


Internal


Accessories

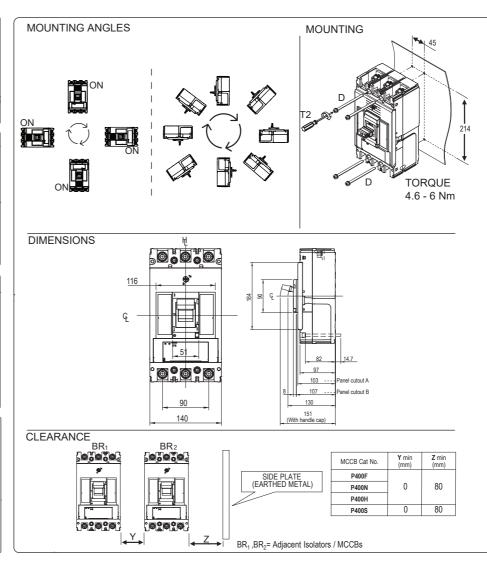


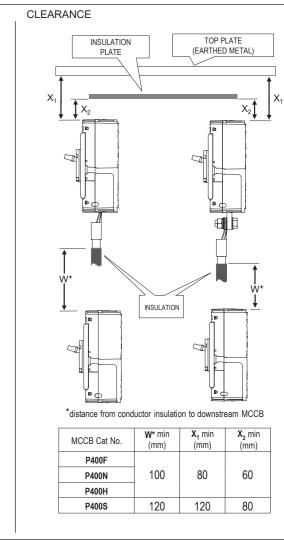


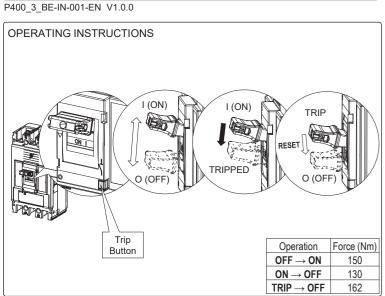


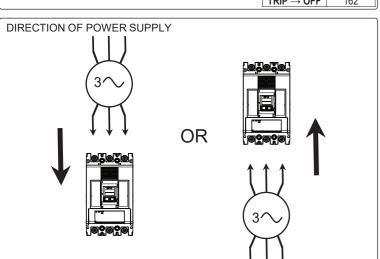

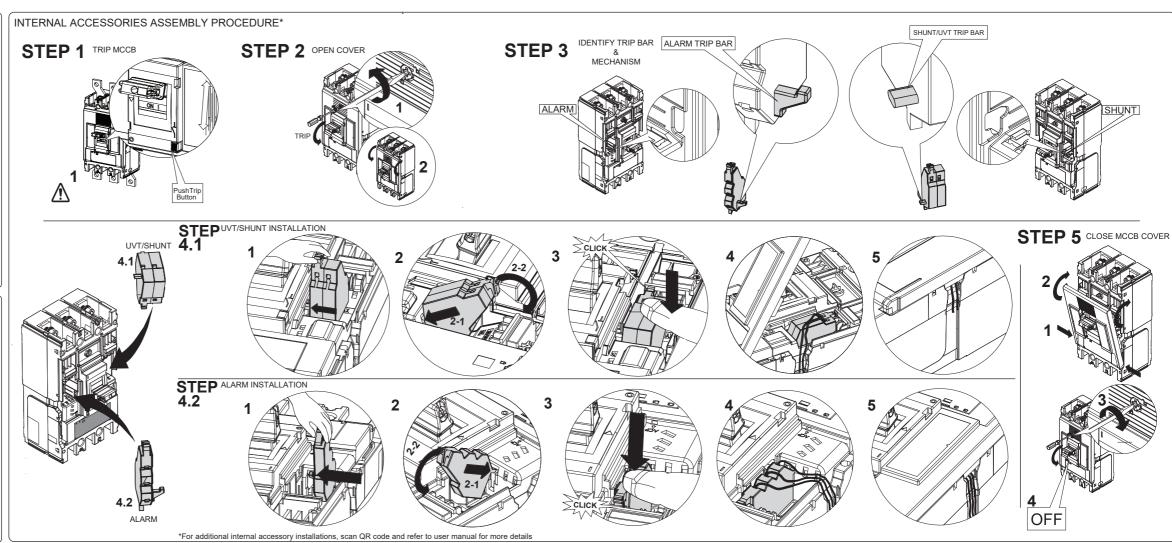

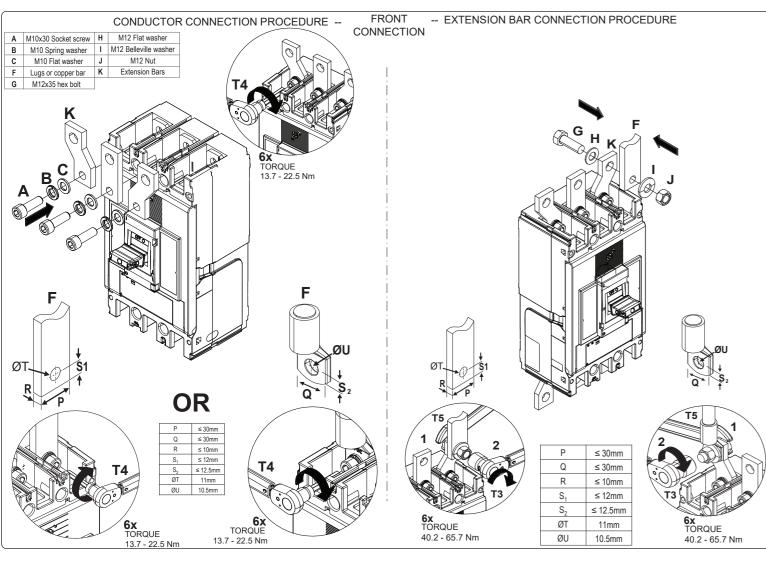

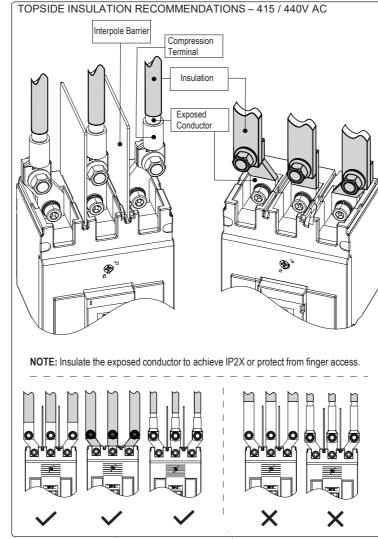

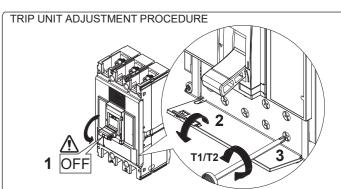


Protection Settings		
L	I _{r1} I _{r2}	Threshold Long Time Protection (Rated Current)
	t _r	Long Time Delay (Time Delay)
S	l _{sd}	Threshold Short Time Protection
	t _{sd}	Short Time Delay
	I ² t ON / OFF	I²t curve on Short delay protection activated or not
ı	l _i	Instantaneous Protection Threshold
GF	I ² t ON/OFF	I ² t curve on Earth Protection Activated (ON) or not activated. (OFF)


NOTE: The I_r (Rated Current) threshold is firstly set using the I_{r1} MAX adjustment dial. If necessary , fine adjustments of 1% increments of I_{r1} are possible using the I_{r2} dial from 0.92 to 1.


NOTE: The t_r time delay defines the trip time of the long-time delay protection for a current of 6 x l_r

 $\mbox{NOTE:}$ The Ground Fault Protection can be turned ON and OFF using the GF dial for a current of 0.4 x ln.

FOR MORE INFORMATION, PLEASE SCAN THE QR CODE

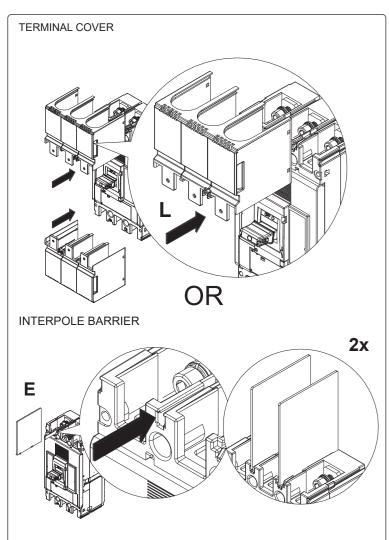

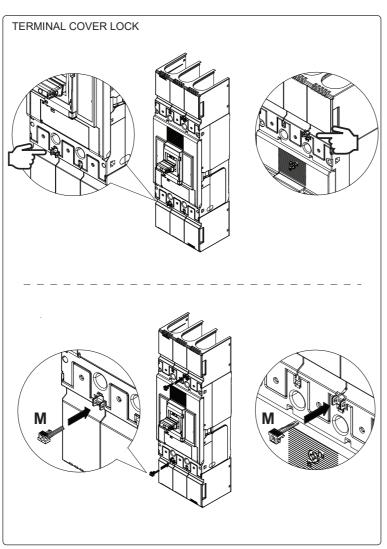

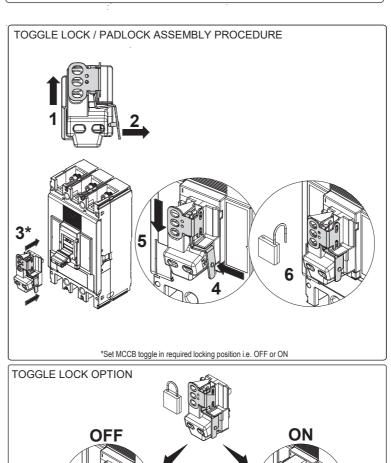

OR

